


USE WITH

The charcoal tray is compatible with these Paradise Grills products: GS-32, GSL-32, and GXL-45 grills. Read this entire instruction sheet before use.

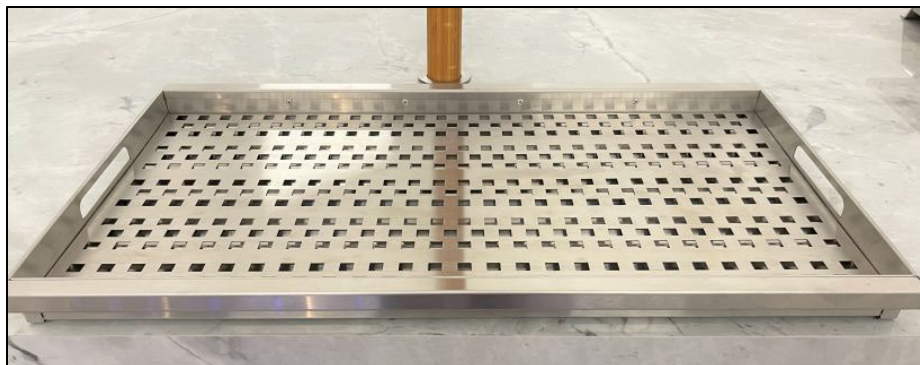

SAFETY WARNINGS

- This accessory is for outdoor use only.
- Do not overfill the tray with charcoal.
- Never throw water on a grease fire. Keep the following items close at hand whenever the grill is in use in case of a fire: fire extinguisher, baking soda, sand, and/or kosher salt
- Do not attempt to move the charcoal tray when it is hot.
- Do not leave a charcoal fire unattended.



SETUP

1. Unpack and remove all packing materials.
2. GS/GSL-32 grills: Remove both grates and all four flame tamers from the grill.
3. GXL-45 grill: Remove the two larger grates and flame tamers, either remove the small grate and flame tamer or slide to one side.
4. Place the charcoal tray into the opening, as shown below, so the tray rests directly on the flame tamer support pins.



5. Replace the grates over the tray

Your charcoal tray is now ready for use! See your grill Operator Manual for more information.

RECOMMENDATIONS

1. Remove the grates, add a single layer of charcoal to the tray, and replace the grates.



2. Light the grill burners and operate long enough to ensure charcoal is ignited, then turn OFF.
3. Ensure grill vents are not blocked – charcoal needs oxygen to burn.
4. When cooking is complete, ensure grill burners are OFF. Allow coals to burn out completely and let ashes cool at least 48 hours before safely disposing.

CLEANUP

- When all fire is out and ashes are cold, lift the tray out of the grill and pour ashes into heavy-duty aluminum foil
- Use a small brush to clean the bottom of the grill; brush debris into the drip pan drain hole
- Remove the drip pan and pour any debris into the foil, wrap it up, and discard into a non-combustible container
- Clean the charcoal pan and grates with hot water and Dawn, or other degreasing cleaner. Dry and store in a safe place.